


Translation of the Original Operating Manual

Drill-Rig – RD250 S

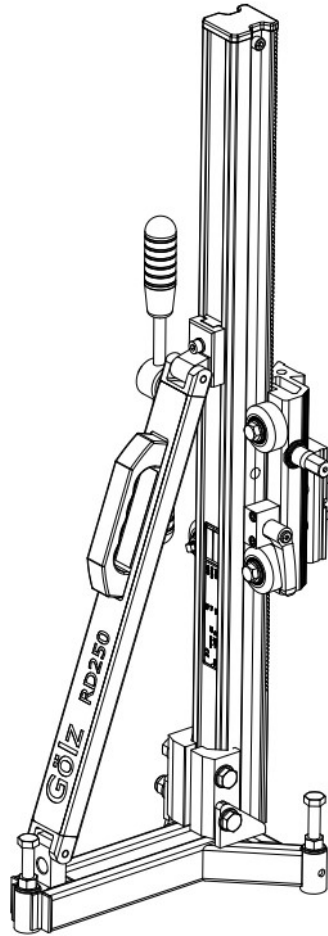

Read operating manual before starting any work!
Keep the operating manual for future use!

Revision			
Date	Chapter	Reason of changed	Person responsible
12-22		Reissue	Design

Revision status: 12.2022
Serial number:

© Gölz GmbH
Dommersbach 51
D- 53940 Hellenthal

Tel.: +49 (0)2482 – 12 200
Fax: +49 (0)2482 – 12 222

E-Mail: info@goelz.de
Internet: www.goelz.de

1 Content

1 Content	3
2 General	5
2.1 Operating manual	5
2.2 Symbols, acronyms, terminology	5
2.3 Explanation of symbols	5
2.4 Liability limitation	7
2.5 Customer service	8
2.6 Copyright	8
3 Safety	9
3.1 Intended use	9
3.2 Rationally foreseeable misuse	9
3.3 Responsibilities of the operator	9
3.4 Responsibilities of the personnel	10
3.5 Personnel requirements	11
3.6 Personal protective equipment	11
3.7 Dangers	12
3.7.1 Residual risks	12
3.7.1.1 Risks through mechanical hazards	12
3.7.1.2 Risks through electrical hazards	13
3.7.1.3 Risks through thermal hazards	13
3.7.1.4 Risks posed by special physical effects	13
3.7.1.5 Risks due to hazardous substances	14
3.8 Safety devices	14
3.9 Spare parts	14
3.10 Actions in emergency and in case of accidents	15
3.11 Signage	15
4 Technical data	17
4.1 Dimensions of the machine	17
4.2 Dimensions of drill bit	17
4.3 Dimensions Anchor Base	17
4.4 Engins and fixing types	17
4.5 Noise emission, Vibration	17
4.6 Operating conditions	17
4.7 Drill bits	18
4.8 Drill bit contact force:	18
4.9 Type plate	19
4.10 Installation site requirements	19
4.11 Storage requirements	19
5 Design and function	21
5.1 Scope of delivery and responsibility	21
5.2 RD 250	21
5.2.1 Functional description	22
6 Transport & packaging	23
6.1 Transport safety information	23
6.2 Transport inspection	23
6.3 Transport symbols	23
6.4 Transport and storage	23
7 Installation and first commissioning	26
7.1 Installation safety information	26
7.2 Site assembled drill rig	26
7.3 Mounting engine	27

7.4	Attachment drill bit	27
7.4.1	With drill motor spindle.....	27
7.4.2	With 3-hole flange	28
7.5	First commissioning and acceptance, general	28
7.6	Steps before commissioning.....	28
8	Operation.....	29
8.1	Operation safety information.....	29
8.2	Intended working position of the operator	29
8.3	Start up preparation	30
8.4	Start-up	30
8.5	Drilling process	30
8.5.1	Vertical drilling.....	30
8.5.2	Angled bores.....	31
8.5.3	Water supply	31
8.6	Stop the drilling process	31
9	Maintenance & cleaning.....	32
9.1	Maintenance safety information	32
9.2	Maintenance plan	32
9.3	Description of the maintenance works to be carried out by the operator	34
9.3.1	Change the drill bit.....	34
9.3.2	Adjust the slider	34
9.4	Steps after completing maintenance	35
9.5	Parts susceptible to wear.....	35
10	Errors	36
10.1	Troubleshooting safety information	36
10.2	Actions in case of errors	36
10.3	Troubleshooting table	37
10.4	Steps after troubleshooting.....	37
11	Dismantling and disposal	38
11.1	Dismantling and disposal safety information	38
11.2	Dismantling	38
11.3	Disposal	38
12	Spare parts list.....	40
12.1	Using the spare parts list	40
12.2	Distribution agencies	40
	EU conformity declaration	42

2 General

2.1 Operating manual

This operating manual provides guidance on safe and efficient operation and should form a basis of any actions involving the machine. It is an integral part of the machine, which should be kept in the immediate vicinity accessible for its operating personnel.

Prerequisite of safe operation is adherence to all safety and handling instructions. Therefore, before starting any work, the personnel must read carefully and understand the operating manual.

Moreover, the accident prevention regulations applicable at the site of the machine operation and general safety regulations must be complied with.

2.2 Symbols, acronyms, terminology

Symbols, acronyms and specialist terminology used in this document have the following meaning:

- ▶ See item
- ▶ Enumeration
- ▶ Enumeration
- ▶ Position number
- ▶ Action step

Text in italics Explanation of facts



Refers to the document contained in the enclosed documentation. The source of the document is specified in italics behind the symbol.

2.3 Explanation of symbols

Warnings and safety instructions

Warnings and safety instructions in the manual are identified with the pictograms and provided in blocks highlighted in grey.

Warnings and safety instructions, which draw attention to fundamental dangers, are additionally preluded by signal words, which specify the scope of damage. Their structure is as follows:

SIGNAL WORD!
Origin of the danger.
Consequences of ignoring the danger.
- Actions to avoid danger

- ▶ All warnings and safety instructions must be implicitly complied with!
- ▶ During the works, always act with caution, to avoid accidents, personal and material damage!

Pictograms combined with signal words mean:



Danger!

... draws attention to an immediate danger that, if not avoided, may result in heavy or even fatal injuries.



WARNING:

... draws attention to potentially dangerous situations that, if not avoided, may cause heavy or even fatal injuries.



CAUTION!

... draws attention to potentially dangerous situations that, if not avoided, may result in slight injuries.



ATTENTION!

... draws attention to potentially dangerous situations that, if not avoided, may result in material damage.

Tips and recommendations



NOTE!

... highlights tips and recommendations as well as information on efficient and trouble-free operation.

Special safety instructions

To make aware of special dangers, the following pictograms are used in combination with the safety instructions:



... marks danger due to electric current.

Failure to observe the safety instructions leads to danger of heavy or fatal injuries.



... marks danger of crushing.

Failure to observe the safety instructions leads to danger of heavy injuries from moving parts.



... marks danger due to hot surface.

Failure to observe the safety instructions leads to danger of burns and heavy skin injuries caused by heat.



... marks danger from moving tools.

Failure to observe the safety instructions leads to danger of cuts and heavy skin injuries caused by rotating tools.

2.4 Liability limitation

All data and instructions provided in this manual were compiled with consideration of applicable standards and regulations, state of the art in this field and our long-standing insights and experience.

The manufacturer accepts no liability for damages caused by:

- ▶ Non-observance of the Operating manual
- ▶ Unintended use
- ▶ Employment of unskilled and uninstructed personnel
- ▶ Unauthorised conversions
- ▶ Technical changes
- ▶ Use of non-approved spare parts

The responsibilities agreed in the delivery contract, the General Terms and Conditions as well as the delivery conditions of the manufacturer and the statutory regulations valid at the time of the conclusion of the contract shall apply.

Warranty

The manufacturer guarantees the functional capability of the applied process technology and performance parameters identified.

The warranty period commences with the defect-free delivery.

Wear parts

Wear parts are all parts having direct contact with the processed or machined material during normal operation.

These parts are excluded from warranty and defect claims, insofar as tear and wear resulting from normal operation.

Service life warranty

Service life warranty is granted for wear parts for the period of 6 months from the acceptance of the defect-free product.

Warranty conditions

12 months after delivery of mechanical and electrical components for one-shift operation, except for the wear parts and tools.

The warranty claim expires, if the system was not installed and started up by our experts.

The warranty extends to the replacement parts.

Consequential damages are excluded.

Damage caused by natural wear, deficient or improper maintenance, failure to comply with the operating regulations, excessive loads and use of inappropriate equipment shall be excluded from the warranty.

2.5 Customer service

Our customer service department is available to provide technical information.

Service-Hotline
02482 – 12 200

You can obtain tips via the regional competent contact person by phone or via fax, email or website at any time.

Moreover, our employees are interested in new information and experience arising from use and which can be valuable for the improvement of our products.

2.6 Copyright

This document is protected by copyright. An unauthorised transfer to third parties, duplication of any kind, including in parts, as well as use and/or disclosure of the content without written permission of the publisher is prohibited.

Non-compliance with this provision is subject to damages. The right for further claims remains reserved.

3 Safety

This section provides an overview of all safety aspects of protection of operators and users from potential dangers, and safe and trouble-free operation.
Disregarding these handling instructions, warnings and safety instructions may pose serious risks.

3.1 Intended use

The Drill-Rig RD250 is designed exclusively for the following purposes in the commercial sector:

The Drill-Rig RD250

- is intended for stand-guided core drilling of the solid construction materials such as: reinforced concrete, concrete, artificial stones and masonry with a diamond drill engine and diamond drill bit.



WARNING:
Risk of unintended use!

Any use beyond the intended use of the machine may result in dangerous situations.

- The machine must be basically used for the intended purpose according to data contained in this document, in particular, within the application limits provided in the technical data.
- Refrain from any use beyond this scope or different use of the machine.
- Refrain from remodelling, refitting or changing the design or separate parts of the machine for the purpose of changing the field of application or applicability of the machine.

- ▶ Any claims for damages resulting from unintended use are excluded.
- ▶ The operator alone is responsible for all damages due to unintended use.

3.2 Rationally foreseeable misuse



WARNING:
Risk of injury caused by misuse!

When misused, the machine may create dangerous situations for persons and cause heavy material damage.

- Refrain from any misuse of the machine.

Any use of the machine going beyond the intended one, shall be deemed unintended and thus prohibited.

This also applies to:

- the drilling of unauthorised construction materials, e.g., timber, metals, plastics
- the drilling any materials other than presented
- the drilling without or with open cutting wheel guard
- the drilling without water

3.3 Responsibilities of the operator

Operator

An operator is every natural or legal person, who uses the machine or delegates its use to others and is responsible for the safety of the user, personnel or third parties in the course of such use.

Operator's duties

The machine is used in the commercial sector. Therefore, the operator of the machine is subject to statutory obligations regarding occupational safety.

In addition to the warnings and safety instructions in this manual, the occupational safety, accident prevention and environmental protection regulations applicable to the field of the machine operation must be adhered to.

The operator, in particular, must:

- ▶ be informed about current occupational safety regulations,
- ▶ determine, through hazard evaluation, any potential additional dangers resulting from specific usage conditions at the site of the machine operation,
- ▶ put necessary behavioural requirements of the operating instructions into practice during the machine tool operation at the operation site,
- ▶ check regularly throughout the service life of the machine, whether the operating instructions drawn up by the operator are in line with the current status of rules and regulations,
- ▶ adjust the operating instructions, where necessary, to the new regulations, standards and operating conditions,
- ▶ exercise control of the competence for installation, operation, maintenance and cleaning of the machine in a clear and unambiguous manner,
- ▶ make sure that all personnel involved with the machine have read and understood the operating instructions. Moreover, the personnel must undergo training in handling the machine at regular intervals and be informed about potential dangers,
- ▶ provide the persons appointed for operating the machine with the prescribed and recommended protective devices.

Moreover, the operator is responsible for ensuring that the machine

- ▶ is always in a technically perfect condition,
- ▶ is maintained according to the specified maintenance intervals, and
- ▶ that all safety mechanisms of the machine are regularly controlled for completeness and functionality.

3.4 Responsibilities of the personnel

The machine is in the commercial use. Therefore, the personnel are subject to statutory obligations regarding occupational safety.

In addition to the warnings and safety instructions in this manual, the occupational safety, accident prevention and environmental protection regulations applicable to the field of operation must be adhered to.

In particular, the personnel must:

- ▶ be informed about current occupational safety regulations,
- ▶ adhere to behavioural requirements set out in the operating instructions issued at the site of the machine operation,
- ▶ properly exercise the responsibilities entrusted to them as regards installation, operation, maintenance and cleaning of the machine,
- ▶ fully read and understand the operating manual before starting work,
- ▶ use the prescribed and recommended protection equipment,

Moreover, scope of responsibility of every person operating the machine includes the duty of always

- ▶ keeping it in a technically perfect condition,
- ▶ performing maintenance, according to the intervals specified,
- ▶ controlling all safety mechanisms for completeness and functionality on a regular basis.

3.5 Personnel requirements

Fundamentals

Any operation with the machine may only be carried out by the persons, capable of performing their work properly and reliably and meet every requirement mentioned.

- ▶ No works can be carried out by the persons, whose response capability is affected, e.g., by drugs, alcohol or medicines.
- ▶ When deploying personnel at the site of operation, always adhere to the applicable occupational and age-specific regulations.

Qualification



WARNING:
Risk of injury for unqualified personnel!

Improper operation can result in significant personal and material damage.

- Any operations must be only carried out by the persons having required training, knowledge and experience.

Instructed personnel

Instructed personnel are the persons, who have been instructed by the operator on the tasks to be carried out and potential dangers in a detailed and verifiable way.

Specialist personnel

Specialist personnel are the persons, who, due to their professional training, knowledge and experience, as well as knowledge of the relevant provisions, are capable of duly carrying out the works assigned, recognise potential dangers independently and avoid personal and material damage.

Qualified electricians

As a matter of principle, all works on the electrical installations must be carried out by qualified electricians.

Qualified electricians are the persons, who, due to their specialist training, knowledge and experience, as well as knowledge of the relevant provisions, are capable of duly carrying out the works on electrical systems, recognising potential dangers independently and avoiding personal and material damage caused by electric current.

Unauthorised persons



WARNING:
Danger of injuries for unauthorised persons!


Those who have not been instructed are not aware of the dangers in the area of operation and must be considered unauthorised persons.

- Keep unauthorised persons away from the area of operation; if in doubt, address the persons met and banish them from the area of operation.
- Suspend operations until unauthorised persons leave the area of operation.

3.6 Personal protective equipment

Wearing personal protective equipment is required during the work.

- (1) Helmet with ear protectors
- (2) Visor or protective goggles
- (3) Dust mask / respirator
- (4) Safety gloves
- (5) Suitable protective clothing
- (6) Protective footwear with protection

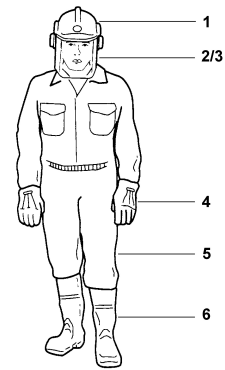

NOTE!

It is prohibited to wear protective gloves near rotating parts, which pose the danger of pinching. Here, danger created by wearing protective definitely surpasses the intended protection.

3.7 Dangers

The machine has undergone a risk review. Wherever possible, the identified dangers were eliminated and risks reduced. Nevertheless, the machine poses residual risks described in the following section.

- ▶ Strictly observe warnings and safety instructions specified here and in the chapters about handling to avoid potential damage to health and dangerous situations.
- ▶ Danger of accidents due to possibly falling drill cores when drilling through ceilings and the like. Areas into which cores may fall during drilling must always be secured against foot traffic and cordoned off at a large distance!

3.7.1 Residual risks

Even if used as intended, the machine may pose the following residual risks:

- ▶ Danger of finger and hand injury by the rotating tool.
- ▶ Injuries from flying workpieces in case of improper keeping or guiding.
- ▶ Injuries by snapped, ejected or faulty diamond segment.
- ▶ Injuries resulting from touching live parts in case of opened or defective electric components.
- ▶ Hearing impairment due to long periods of work without hearing protection.

3.7.1.1 Risks through mechanical hazards

Rotating tools



CAUTION!
Risk of cut injuries!

Reaching into rotating tools may lead to heavy injuries.

- Do not touch rotating drill bit in any circumstances
- Only work with safety equipment
- Remove drill cores only when the drill motor is not running

Flying clippings / tool



CAUTION!
Risk of injury by flying clippings or tool parts!

Failure to wear appropriate protective equipment or working with inappropriate drill bits may lead to heavy injuries.

- Wear protective goggles
- Maintain sufficient safety distance to rotating tool
- Only work with drill bits that are designed for the object to be drilled

Movable parts



CAUTION!
Risk of injury by pinching in movable parts!

Failure to wear appropriate protective equipment may lead to heavy injuries.

- Wear protective gloves
- Always fix the drilling carriage when moving the machine

3.7.1.2 Risks through electrical hazards

Electric current



DANGER!
Danger to life from electric current!

Touching live parts leads to death. Damaged insulation or individual components can be life-threatening.

- Disconnect the machine from the power supply before any work on the electric system. Verify that the system is disconnected from power supply.
- Switch off power supply before maintenance, cleaning and repair operations and secure the machine against being restarted.
- If the power supply insulation is damaged, switch off immediately and arrange for repairs.
- Never bypass or disable fuses.
- Always use fuses with correct amperage when replacing defective fuses.
- Keep moisture away from live parts.
- Any works on the electrical installations must be carried out by qualified electricians.

3.7.1.3 Risks through thermal hazards

Hot surfaces



CAUTION!
Risk of burns on hot surfaces.

Contact with hot parts may cause burns.

- Do not touch the surface.
- Before every work, make sure that the parts have cooled down to the ambient temperature.

3.7.1.4 Risks posed by special physical effects



CAUTION!
Danger of injuries caused by special physical effects

Failure to wear appropriate protective equipment may lead to heavy injuries.

- Wear ear protectors

3.7.1.5 Risks due to hazardous substances



CAUTION!

Risk of injury by hazardous substances, such as dust and cutting water or slurry!

Failure to wear appropriate protective equipment may lead to damage to health.

- Use personal protective equipment
- Renew the cutting water regularly
- Use the dust mask
- Connect water supply

3.7.1.6 Risks due to work environment conditions



CAUTION!

Risk of injury due to inadequate lighting.

Work in inadequate lighting conditions may lead to heavy injuries.

- Provide for adequate lighting at the workplace.

3.8 Safety devices



WARNING:

Danger to life due to defective or bypassed safety devices!

Inoperable, bypassed or disabled safety devices do not protect from hazards and may lead to heavy or fatal injuries.

- Before commencement of works, always make sure that all safety devices are properly installed and functional.
- Never disable safety devices.
- Ensure that the safety devices are always freely accessible.



NOTE!

See safety devices in → "Instruction manual core drilling motor".

3.9 Spare parts



WARNING:

Risk of injury due to wrong spare parts.

Wrong spare parts can seriously compromise safety and cause damage and malfunction up to total failure.

- As a matter of principle, only original spare parts must be used.

Original spare parts can be obtained via an authorised dealer or directly from the manufacturer.

3.10 Actions in emergency and in case of accidents

Necessary actions

- ▶ Always be prepared for accidents or fire.
- ▶ First aid facilities (first aid box, cloth, etc.) and fire extinguisher must be close at hand.
- ▶ Personnel must familiarise themselves with accident signalling equipment, first aid and rescue facilities.
- ▶ Access roads for rescue vehicles must be always kept free.

If the need arises, act properly

- ▶ Activate emergency stop immediately
- ▶ Initiate first aid measures
- ▶ Remove persons affected from the danger area.
- ▶ Inform persons responsible at the operation site.
- ▶ Alert doctor and/or fire brigade in case of heavy injuries.
- ▶ Keep access roads for rescue vehicles free.

3.11 Signage

Danger of cutting damage



CAUTION! **Risk of cut injuries!**

Reaching into moving tools may lead to heavy injuries.

- Do not touch rotating drill bit in any circumstances
- De-energise the machine before replacing the drill bit

Danger from electric current!



DANGER! **Danger to life from electric current!**

Touching live parts leads to death. Damaged insulation or individual parts can be life-threatening.

- Disconnect the machine from the power supply before any work on the electric system. Check that no voltage is present!
- Switch off power supply before maintenance, cleaning and repair operations and secure the machine against being restarted.
- If the power supply insulation is damaged, switch off immediately and arrange for repairs.
- Never bypass or disable fuses.
- Always use fuses with correct amperage when replacing defective fuses.
- Keep moisture away from live parts.
- Any works on the electrical installations must be carried out by qualified electricians.
- Annual check of the electric system according to VDE0701.

Illegible signs



CAUTION! **Risk of injury due to illegible symbols!**

Stickers and signs that got illegible, make danger zones insufficiently recognisable and may become incapable of indicating potential injury risks.

Always maintain legibility of pictograms, safety warning and operating instructions.

There are the following symbols and information signs on the machine that refer to potential dangers:

	Wear gloves Wear ear protectors The machine meets EU guideline Observe the operating manual Wear protective goggles	
---	--	---

4 Technical data

4.1 Dimensions of the machine

Specification	Value	Unit
Length	373	mm
Width	300	mm
Height	953	mm
Operating weight Drill Rig	11	kg

4.2 Dimensions of drill bit

Specification	Value	Unit
max. length	600	mm
max. width Ø	250	mm

4.3 Dimensions Anchor Base

Specification	Value	Unit
max. length	320	mm
max. width	250	mm
Height	88	mm

4.4 Engines and fixing types

Engine	Connection
FB20P	Engine neck
FB23P	Engine neck
FB25P	Engine neck
FB33PNT / SNT	Engine neck
GBM25	Motor-plate
EBL33L	Motor-plate

4.5 Noise emission, Vibration

Specification	Value	Unit
Sound pressure level	88	dB (A)
Sound power level	101	dB (A)
Guaranteed sound power level	102	dB (A)
Vibration value	< 2,5	m/s ²

Measurement tolerances	Value	Unit
Sound pressure level	4	dB (A)
Sound power level	2,5	dB (A)
Vibration value	0,2	m/s ²

The specification defines the volume of the noise exposure, related to the operator's workplace and to the sound power level of the machine.

The emission values meets standards EN ISO 3744, EN 12418 and Directive 2005/88/EC.

Noise emissions for drill rig in system with core drill motor FB23P/S and diamond core bit RM52 Ø162mm.

4.6 Operating conditions

Working zone

Specification	Value	Unit
Temperature range	Ambient temperature 5-45	°C
Relative air humidity, maximum	60 (without condensing)	%
Conditions	Only operate the machine tool in the dust-free environment! Avoid direct impact of dampness, dust and frost. Do not operate in strong electric and magnetic fields! Do not operate the machine tool in explosive atmosphere!	

4.7 Drill bits

Drill bit type	Drill bit diameter	Material
RM 30	Ø10-Ø250 mm	reinforced concrete, reinforced concrete heavily reinforced, granite ductile cast iron pipes
RM 52		Premium concrete, reinforced concrete, medium-hard masonry
RM 65		Reinforced Concrete



DANGER! **Risk of injury by defective or incorrectly mounted drill bits!**

Damaged drill bits may cause injuries of personnel!

- Before starting work, check the drill bit for breakage of individual segments, segment pieces, cracks at the segment base, deformation of the drill bit or wear.
- Replace defective drill bits immediately

4.8 Drill bit contact force:




Note!

The dowel extraction forces should be minimised!

The greater L2 is selected, the lower the dowel extraction forces!

$$F1 \times L3 = F \times L2$$

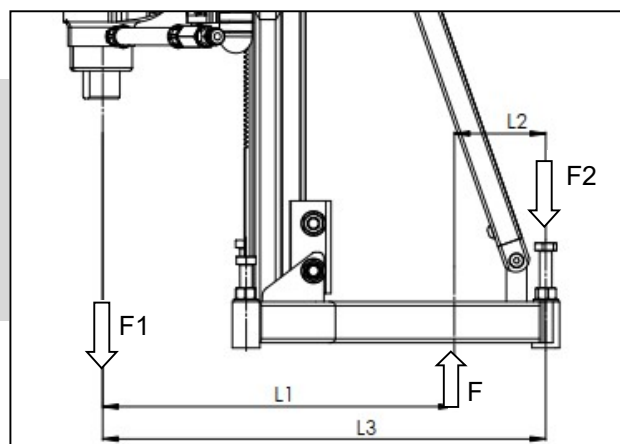

Drill bit Ø	Segment	Contact force	Dimension L3	Dimension	Extraction
-------------	---------	---------------	--------------	-----------	------------

(mm)	(piece)	drill bit (N)		L2	force F(kN)
50	5	1080	546	175	3,4
100	9	1890	546	175	5,9
150	12	2880	546	175	10
200	14	3780	546	175	11,8
250	20	4000	546	175	12,5



DANGER!

Risk of injury by defective or incorrectly mounted drill bit!

Wrong rotation direction and damaged drill bits may cause injuries of personnel!

- Check that the correct drill bit is fitted before starting work
- Observe the speed reference values (engine operating manual) and select the appropriate gear!




NOTE!

All drill bits used must be designed for the corresponding drive speed of the machine and the intended use with regard to their permissible maximum cutting speed. Optimum peripheral speed: 2 to 4 m/s

4.9 Type plate

The type plate is located on the rear of the column profile.

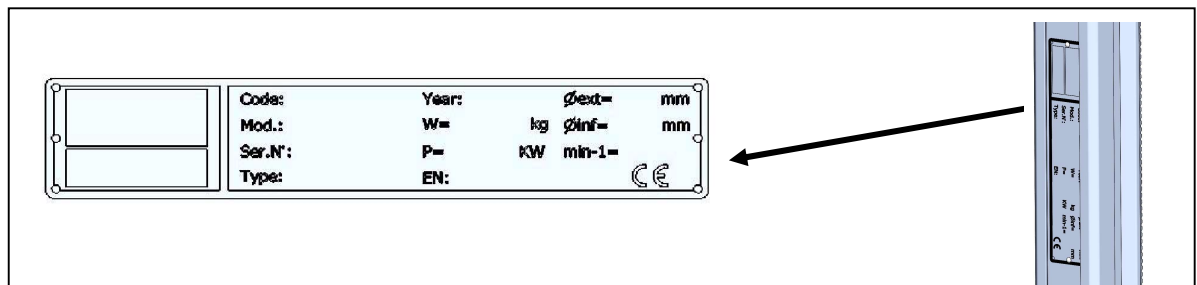

4.10 Installation site requirements

The floor surface must:

- ▶ have sufficient load bearing capacity,
- ▶ be free of barrier,
- ▶ withstand the required extraction force,

Installation conditions

- ▶ Choose the installation site as per space requirements according to the technical data.



NOTE!

The machine is designed for use in daylight. In case of work zones with poor or no lighting, ensure sufficient lighting of the workplace.

4.11 Storage requirements

Storage conditions

As a matter of principle, the machine, its components, assemblies or parts must be only stored in the following conditions:

- ▶ do not store outdoors
- ▶ store in dry and dust-free place
- ▶ do not expose to aggressive media
- ▶ protect from solar radiation
- ▶ avoid mechanical vibrations
- ▶ storage temperature range 5 to 45°C
- ▶ relative air humidity, max. 60%

In case of storage for over 3 months, check general condition of all parts and packaging on a regular basis. If necessary, renew or replace conservation materials.

5 Design and function

The drill stand is mounted on a dowel base which is made of a robust welded construction. The aluminium column with tooth profile has an indirect connection to the dowel foot and is provided with a support to the dowel foot for stabilization. The Slider has roller guide, Engine neck and Engine with Motor-plate can be adapted.

5.1 Scope of delivery and responsibility

The machine was developed and manufactured under sole responsibility of Gölz GmbH.

Upon transfer to the operator, the responsibility for safe handling and instruction of the personnel passes to the operator.


The manufacturer offers training on the machine.

The scope of delivery includes the following components:

Components	Quantity
Drill rig	1
Technical documentation	1

Optional accessories	Quantity
Water collection ring	1

5.2 RD 250

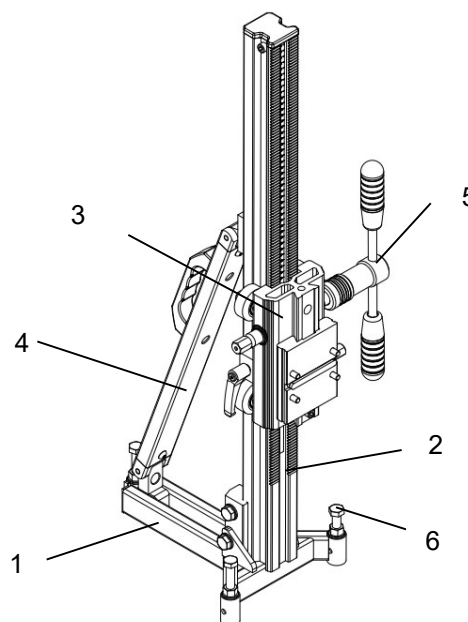

Anchor base

The Anchor

1	Anchor base	4	Support
2	Column	5	Handwheel
3	Slider	6	Adjusting screws

base (1) is a robust

welded construction, manufactured from a high-quality aluminium alloy. On the Anchor base the column and the support are fastened. It has three adjust screws, one handle and a valve.

Column

The Column (2) is a aluminium profile with integrated gear rack and a scale as depth indication as well as a plug to close the column.

Slider

The Slider (3) is equipped with roller guides. It consist of an aluminium profile including mounting parts. Engine neck, engine and handwheel (5) can be attached and fixed to it.

Support

The Support (4) is to stabilize the entire drill stand. For the transport or relocation of the machine, a handle is located on the support for carrying.

Handwheel

The Handwheel (5) is used to move the carriage over the column. It can be attached to both sides of the carriage.

Adjusting screws

With the Adjusting screws (6) you can adjust the drill rig exactly.

5.2.1 Functional description

The Drill rig is designed exclusively for core drillings of the drill sizes in ->Technical data.

The core drilling stand is the central unit of the stand guided diamond core drilling and is firmly attached to the object to be drilled at the site of operation. The holder of the core drilling motor is located on the slide or on the clamping neck of the core drilling stand. The drilling motor can be firmly connected via this holder. The appropriate diamond drill bit is attached to the spindle of the drill motor.

The drill stand guides the drill bit exactly during drilling and provides the required contact pressure via the slide and hand wheel.

6 Transport & packaging

6.1 Transport safety information



ATTENTION!

Damage through improper transportation!

Improper transportation can result in considerable damage of the transported goods and objects in the vicinity.

- Always act with utmost caution and care when loading and unloading transported goods.
- Pay attention to instructions and symbols on the packaging.
- Never remove transport locks earlier than before assembly.

6.2 Transport inspection

Inspect the condition of the transported goods immediately upon delivery for completeness and damage.

In the event of externally recognisable damages:

- ▶ do not accept the delivery or accept it only conditionally,
- ▶ record the scope of the damage in the transport documents and indicate it in the carrier's consignment note,
- ▶ lodge complaint.



NOTE!

Claim any defect immediately upon delivery of the transported goods!

Claims regarding transport damage can only be lodged within valid complaint periods.

6.3 Transport symbols

On the outside of the transported goods, there are symbols corresponding to the content, which must be strictly observed during transportation and storage.

Meaning of the transport symbols

The following transport symbols can be placed on the transported goods:

	This side up The arrowheads indicate the top end of the transported goods. These should point upwards otherwise the content can be damaged.		Keep dry Protect the transported goods from dampness and keep them dry.
	Anchor point Only attach lifting tackle to the indicated points.		Centre of gravity Indicates the centre of gravity of the transported goods. Pay attention to the centre of gravity position when handling the goods!

6.4 Transport and storage

Handling packaging

The machine is packed in a safe and environmentally sound manner for the anticipated transport conditions. The packaging protects the parts up to the beginning of assembly from damage and corrosion.

- ▶ Only remove packaging and transport locks before assembly.
- ▶ Dispose of packaging materials according to applicable local regulations.



ATTENTION!

Environmental damage through improper disposal!

Packaging material is valuable raw material and can be used again or expediently reprocessed and recycled.

- Always dispose of packaging materials in an environmentally sound manner.
- Follow local regulations. If necessary, employ a specialised company for waste disposal.

Transport of the machine



ATTENTION!


Damage through improper transportation!

Improper transportation can result in considerable damage of the machine and objects in the vicinity.

Before every transport:

- the slider is to be fixed
- the machine is to be disconnect from the electricity

The machine can be carried by one person via the attached handle on the support.

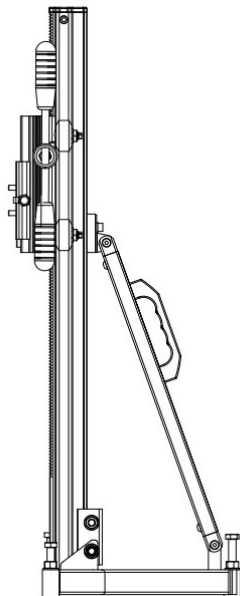

NOTE!

The machine is not designed for crane transport. There are no appropriate load suspension points on the machine.

Storage of the machine

Store the machine in the following conditions:

- ▶ indoors only,
- ▶ store in dry and dust-free place,
- ▶ do not expose to aggressive media,
- ▶ protect from solar radiation,
- ▶ avoid mechanical vibrations,
- ▶ storage temperature: 5 to 45 °C,
- ▶ relative air humidity: max. 60%.
- ▶ In case of storage for over 3 months, check general condition of all parts and packaging on a regular basis. If necessary, renew or replace conservation materials.



Note!

Protect from moisture!

Clean the machine thoroughly before storing and grease components such as rollers, bearings and threads.

7 Installation and first commissioning

7.1 Installation safety information



WARNING! **Risk of injury due to improper installation!**

Improper work performance and installation errors can result in heavy injuries during work and life-threatening situations during commissioning and operation.

- Any installation works must be only carried out by trained personnel authorised by the operator.
- Sufficient assembly freedom must be ensured before commencement of works.
- Always keep the working zone tidy and clean!



DANGER! **Danger to life from electric current!**



Touching live parts leads to death. Damaged insulation or individual parts can be life-threatening.

- Connection, inspection and measurements of electric parts must be carried out by qualified electricians.
- In case of defective electric components switch off immediately and arrange for repairs.
- Keep humidity away from live parts.

7.2 Site assembled drill rig

Anchor-techniques:

Place the drill stand at the desired position, the laser will show the exact centre of the drill hole. Mark the dowel point (4) through the the opening (2) in the Anchor base(1) and drill with a percussion drill. Follow the installation instructions of the dowels (Fischer FDBB16SE). Then screw on the anchor rod (6) and spread the dowels (5). Attach the core drill stand to the anchor rod using the washer/dowel latch (7) and fixing nut (8) and align via the adjusting screws (3).

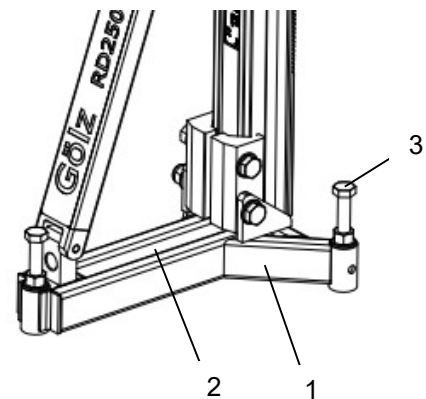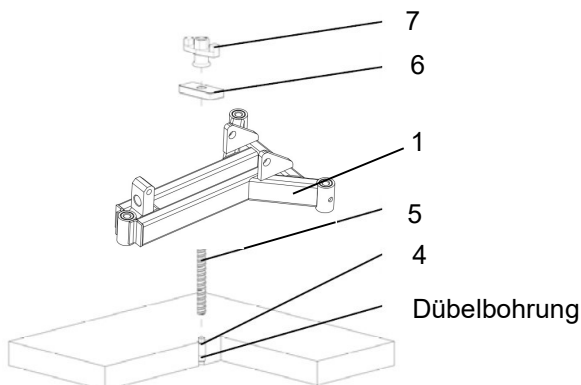

Personal protective equipment

- ▶ Protective clothing
- ▶ Protective gloves
- ▶ Safety shoes
- ▶ Ear protectors
- ▶ Protective goggles

7.3 Mounting engine

Before you mount the drill motor on the drill stand, make sure the following

- ▶ The drill stand is fixed in accordance with regulations
- ▶ The attachment of the drill rig to the drilling object must withstand the pull-out forces
- ▶ The drill stand is aligned via the compensation screws
- ▶ The working area in front of and behind or under the drilling object is closed off and secured
- ▶ The drill motor is disconnected from the power supply






Note!

Do not attach diamond core bits to the drill spindle until the drill motor has been mounted!

When mounting a motor by means of a motor plate, proceed as follows:

- ▶ Screw the motor plate (1) to the motor (5) if not already mounted. The motor plate is aligned with the motor with a feather key (4) and screwed to the motor with the four screws (3).
- ▶ Push the motor plate with motor from above into the locating wedge (7) on the slider (6). Push the motor plate on as far as it will go.
- ▶ Tighten the fixing screw (2) of the motor plate. The motor plate with motor is now secured against slipping out.
- ▶ The drill bit can now be attached

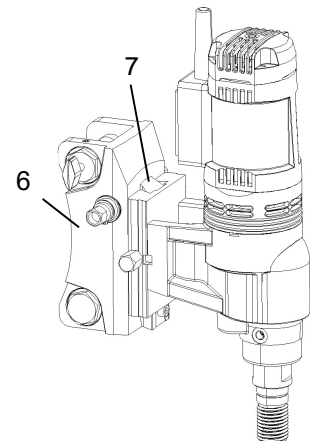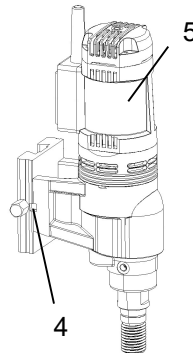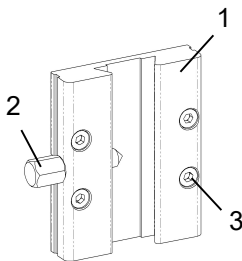

Personal protective equipment

- ▶ Protective clothing
- ▶ Protective gloves
- ▶ Safety shoes

7.4 Attachment drill bit



NOTE!

Clean all fastening elements carefully before mounting the core bit!

7.4.1 With drill motor spindle

Fit the drill bits directly to the drill motor spindle. Wind the drill carriage up, but only to such point that the drill bit easily fits under the drill motor spindle.

When fitting the drill bit, please observe the following order:

- ▶ first the brass disc
- ▶ then the O-ring
- ▶ finally the drill bit

7.4.2 With 3-hole flange

Fit the 3-hole flange to the gear box. Fit the flange to the gear shaft in such a way that the serration meshes and screw the two set screws in the flange into the gear shaft. Now wind the drill carriage up, but only to such point that the drill bit easily fits under the flange.

Then, with a wrench SW 17, screw the three screws M 10 x 20 through the flange into the holes of the drill bit.

Lock the flange with a SW 41 wrench.

7.5 First commissioning and acceptance, general

**DANGER!**

Risk of injury during the first commissioning or adjustment works. Therefore:

- Before starting work, disable the machine and secure the machine against being restarted. Affix warning signs!
- Ensure that the machine is properly and sufficiently secured to the object to be drilled
- Ensure that all components of the machine are firmly connected and secured against slipping out
- Ensure sufficient lighting
- Ensure that there are no unauthorised persons in the work area
- Make sure that the power and water lines leading to the motor are long enough and have been laid according to the instructions.

The drill rig is delivered fully assembled. The machine is set up and aligned at the place of use. All components such as motor, clamping neck and drill bit are attached to the machine and firmly mounted.

7.6 Steps before commissioning

Before putting the machine into operation, make sure that the motor is connected exactly according to the operating instructions of the motor and that the water and power lines have been installed safely and according to regulations.

**Danger!**

Risk of injury due to improper laying of supply lines!

There must be no danger of tripping over water and power lines leading to the motor!

8 Operation

8.1 Operation safety information



WARNING!

Risk of injury due to improper operation!

Improper operation may lead to heavy injuries.

- The machine may only be operated by trained personnel authorised by the operator.
- Before every work, make sure that the safety devices are correctly installed and function without flaws.
- Never disable safety devices.
- Always keep the working zone tidy and clean! Objects, parts, workpieces, tools and cleaning devices loosely lying around are accident sources.



DANGER!

Danger to life from electric current!

Touching live parts leads to death. Damaged insulation or individual parts can be life-threatening.

- In case of defective electric components switch off immediately and arrange for repairs.
- Keep humidity away from live parts.

Personnel

- ▶ Instructed personnel

Personal protective equipment

- ▶ Protective clothing
- ▶ Protective gloves
- ▶ Safety shoes
- ▶ Ear protectors
- ▶ Protective goggles

8.2 Intended working position of the operator

The operator stands laterally behind the machine so that he can see the complete machine and the drilling process in front of him, comfortably operate the handwheel and immediately disconnect the power supply to the motor.



8.3 Start up preparation

To safely use the machine as intended, the following preconditions must be met:

- ▶ The machine is securely fastened and all components are firmly mounted
- ▶ The water and power lines are connected and safely installed.
- ▶ The water supply is functional
- ▶ The drill motor was set in the right gear for this drill bit. You will find the exact procedure and speed table in the motor operating instructions.
- ▶ There must be no wrench or auxiliary tool left on the machine
- ▶ The working area above and below or in front of and behind the object to be drilled is widely blocked and secured

8.4 Start-up



Note!

Check after starting:

- The machine is switched on via the main switch. This is located on the power cable of the drill motor. Observe the motor operating manual.

Follow the instructions.

8.5 Drilling process

8.5.1 Vertical drilling

For vertical drilling, the column of the drill stand rests directly on the anchor point of the Anchor base. This is the delivery condition of the drill stand.

To set up for this setting, proceed as follows:

1. Switch off the machine -> motor and core bit must not rotate!
2. Loosen the column slightly at its fixing points and its sliding elements.
3. Push the column to the anchor point on the Anchor Vacuum base.



Note!

When adjusting the drill stand, it is easier if components such as the motor and drill bit have been removed beforehand! Always pull out the mains plug!

4. Tighten the fixing screws on the sliding elements again -> check that the column is fixed and cannot move.
5. Position the machine at the desired location and fasten it using dowel technology.
6. Attach all components back to the drill stand and fix them.
7. Grip the handle of the handwheel with one hand and the main switch of the drill motor with the other hand.



Note!

*Never touch the drill bits while the engine is running!
In an emergency, immediately pull out the mains plug!*

8. After starting the engine, switch on the water.
9. Now slowly plunge the rotating drill bit into the material via the hand crank and drill through it.
10. After piercing the material, move the rotating drill bit out of the hole using the hand crank. Now switch off the motor and the water supply.

8.5.2 Angled bores

The machine offers the possibility to perform angled drilling.

For inclined bores we proceed as follows:

1. Turn off the machine -> The engine and drill bit must not turn anymore!
2. Loosen the guide column slightly at its fixing points and its sliding elements.
3. Swivel the guide column until the desired drilling angle is reached.
4. Tighten the fixing screws on the sliding elements again -> check that the guide column is fixed and cannot move.
5. Position the machine at the desired location and fasten it using dowel technology.
6. Make sure that all components are attached and firmly mounted.
7. Grip the handle of the handwheel with one hand and the main switch of the drill motor with the other hand.
8. Start the machine.



Note!

*Never touch the drill bits while the engine is running!
In an emergency, immediately pull out the mains plug!*

9. After starting the engine, switch on and adjust the water supply.
10. Now slowly plunge the rotating drill bit into the material via the hand crank and drill through it.
11. After piercing the material, move the rotating drill bit out of the hole using the hand crank. Now switch off the motor and the water supply.

8.5.3 Water supply

The motor is connected to a fresh water pipe.

- Dirty water can clog the water supply line to the drill bit
- Collect the cutting mud during drilling, then filter and dispose of properly

8.6 Stop the drilling process

After the material has been drilled through and the rotating diamond core bit is running freely again outside the hole, switch off the drill motor and the water supply now.
Proceed exactly according to the motor operating instructions.



Note!

*Never touch the drill bits while the engine is running!
In an emergency, immediately pull out the mains plug!*

9 Maintenance & cleaning

9.1 Maintenance safety information



WARNING!
Risk of injury due to improper maintenance!

Improper maintenance may lead to injuries.

- Any maintenance works must be only carried out by instructed specialist personnel authorised by the operator.
- Sufficient assembly freedom must be ensured before commencement of works.



DANGER!
Danger to life from electric current!

Touching live parts leads to death. Damaged insulation or individual parts can be life-threatening.

- Switch off the electric system before maintenance and repair operations and secure it against being restarted.
- Keep humidity away from live parts.



WARNING!
Risk of injury due to wrong spare parts.

Wrong spare parts can seriously compromise safety and cause damage and malfunction up to total failure.

- As a matter of principle, only original spare parts must be used.



CAUTION!
Risk of cut injuries!

Reaching into moving tools may lead to heavy injuries.

- Do not touch rotating drill bit in any circumstances
- If any works need to be carried out, disconnect the machine from power supply

9.2 Maintenance plan

Maintenance works necessary for optimum and trouble-free operation are described in the following sections.

- ▶ If an increased wear of parts is revealed by regular inspections, reduce the maintenance intervals!
- ▶ Draw up a maintenance log after every maintenance! The log assists in error analysis, enables adjusting the intervals to actual usage conditions and validating guarantee claims.
- ▶ If you have any queries on maintenance works and intervals:
contact manufacturer.

Interval	Maintenance work	Personell
Before every commissioning	Visual check - Entire machine - Tool holder (engine spindle) - tools (drill bit) - operation elements (handle...) - drill rig and slider - all komponenten	Operating personnel
	Visual check - engine - the column	Specialist personnel
	Checking the tool (drill bit) for replacement necessity	Operating personnel
	Slider - lubrication - greasing - oiling - applying corrosion protection	Operating personnel
After completion of work	Cleaning of - entire machine - operation elements (handle...) - tools (drill bit) - Drill rig	Operating personnel
	Cleaning of - engine und drill spindle	Specialist personnel
	tool holder (drill spindle) - lubrication - greasing - oiling - applying corrosion protection	Operating personnel
weekly	Check and adjust - Operation elements (handle...) - slider and guide elements - Screw fitting	Operating personnel
Yearly	- Perform statutory safety test for engine	Qualified electricians
In case of an error	Visual check - entire machine - der Diamantbohrkrone	Operating personnel
	Visual check - engine - Drill rig	Specialist personnel
In case of damage	change and replacement - entire machine - drill bit - Drill rig - Operating elements (handle...) - Engine neck - engine	Operating personnel

9.3 Description of the maintenance works to be carried out by the operator

**ATTENTION!**

Cleaning by a high-pressure cleaner will damage the machine.

**ATTENTION!**

Foaming and cleaning with water will damage the machine.

**ATTENTION!**

The drill bit may not be cleaned by metal cleaning tools (scraper, metal sponge or similar), otherwise it will be damaged.

9.3.1 Change the drill bit

The drill bit needs to be changed if:


- the diamond segments on the drill bit are completely worn, damaged or broken off
- the material to be drilled changes
- the drill bit runs out of round

9.3.2 Adjust the slider

The drill slides with roller guide have rollers made of plastic as guide elements which wear out after a certain time. Due to friction between the guide elements and the guide column, an inaccuracy (play) becomes noticeable in the long run. This inaccuracy of the drill slide guide can be eliminated by readjusting the guide elements. If the guide elements are too worn out, they must be replaced by new ones.

Adjust roller guide

- Hold the eccentric shaft over the square head with a wrench
- Loosen the lock nut of the adjusting roller
- Minimize inaccuracy by turning the eccentric shaft and bringing the roller back into contact with the guide column
- Hold the eccentric shaft with a wrench and retighten the lock nut

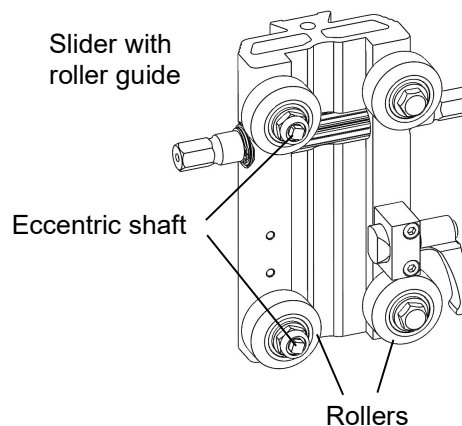

9.4 Steps after completing maintenance

After completion of the maintenance works and before switching on, follow the following steps:

1. Check for tightness all threaded joints previously detached.
2. Check the proper installation of all previously removed protective devices and covers.
3. Make sure that all tools, materials and other equipment have been removed from the working zone.
4. Clean the working zone and remove any spilled substances such as liquids, processing materials or similar.
5. Make sure that all safety devices of the system function properly.

9.5 Parts susceptible to wear

Machine parts susceptible to wear are:

- Friction bearing
- Pinion shaft
- Column
- Rollers
- Handwheel
- Adjusting screws
- Handles
- Stickers
- Brake plug
- Connection plate

Wear of these parts does not present any product defect.



NOTE!

Wear parts are highlighted in grey in the spare parts list!

10 Errors

10.1 Troubleshooting safety information

**WARNING!****Risk of injury due to improper troubleshooting!**

Improper actions in the course of troubleshooting may lead to heavy injuries.

- Any repair works must be only carried out by instructed specialist personnel authorised by the operator.
- Sufficient assembly freedom must be ensured before commencement of works.
- Always keep the working zone tidy and clean! Objects, parts, workpieces, tools and cleaning devices loosely lying around are accident sources.
- Check correct assembly of spare parts if these have been replaced. Fit properly all fastening elements. Observe screw tightening torques.
- Before recommissioning, make sure that all safety devices are properly installed and functional.

**WARNING!****Risk of injury resulting from unauthorised restarting!**

Personnel working on individual parts can be injured if the machine is restarted unexpectedly.

- Before working on any individual parts, switch off the machine and secure it against being restarted.

**DANGER!****Danger to life from electric current!**

Touching live parts leads to death. Damaged insulation or individual parts can be life-threatening.

- Switch off the electric system before maintenance and repair operations and secure it against being restarted.
- Keep humidity away from live parts.

10.2 Actions in case of errors

The following basically applies:

1. In case of errors posing an immediate danger for personnel or property, immediately activate the emergency stop.
2. Switch off power supply and secure it against being restarted.
3. Inform persons responsible at the operation site.
4. Depending on error reason type, assign responsible authorised specialist personnel to identify and eliminate it.

10.3 Troubleshooting table

Error message / error	Possible cause	Troubleshooting	Personnel
Machine when starting without function	Power plug not properly attached	Check power connection	Operating personnel
	Power plug defective	Check power plug for function	Qualified electricians
	Engine defective	Check engine. If defective, replace or repair	
Machine has no power	Cable too long or Cable reel not unwound	Observe the prescribed length of the power cable. Unwind the cable drum	Operating personnel
	Power grid is not enough	Follow the connection data of the machine	
	Engine does not keep the speed	Check engine or replace engine	Qualified electricians
No cooling water	Hose clogged	Clean and route hoses correctly	Operating personnel
	Hose leaking	Repair or replace hose	
Diamond drill bit does not cut well	Not enough or too much water	Adjust the amount of water correctly	Operating personnel
	Engine speed too high	Choose the right gear (engine- speed list)	
	Diamond segments have become clogged, worn out or defective	Sharpen drill bit	
	engine overloading (feed too high)	Reduce feed rate	
	Very hard concrete	Reduce feed rate or change drill bit	
	Diamond drill bit is stuck	Check the drill rig fixing. if necessary, realign the drill rig	
Diamond drill bit is out of round	Engine bearing or spindle defective	Replace affected component	Manufacturer
	Diamond drill bit is dented	Change diamond drill bit	Operating personnel
Bore runs during drilling	Drill rig fixing insufficient	Fix the drill rig better	Operating personnel
	Slider guidance too inaccurate	Adjust the slider	
	Drill stand tilts strongly to the side	Set the adjusting screws exactly	
	Underground too uneven	Use anchor techniques	

10.4 Steps after troubleshooting

After completion of the troubleshooting and before switching on, follow the following steps:

1. Check for tightness all threaded joints previously detached.
2. Check proper installation of all previously removed protective devices and covers.
3. Make sure that all tools, materials and other equipment have been removed from the working zone.
4. Clean the working zone and remove any spilled substances such as liquids, processing materials or similar.
5. Make sure that all safety devices of the machine function properly.

11 Dismantling and disposal

After the design service life is over, the machine must be dismantled and disposed of in an environmentally sound manner.

11.1 Dismantling and disposal safety information



WARNING!

Risk of injury resulting from improper dismantling!

Improper actions in the course of dismantling may lead to heavy injuries.

- Any dismantling works must be only carried out by instructed specialist personnel authorised by the operator.
- Sufficient assembly freedom must be ensured before commencement of works.
- Always keep the working zone tidy and clean! Objects, parts, workpieces, tools and cleaning devices loosely lying around are accident sources.
- Mind sharp-edged parts, corners and points.
- During dismantling operations, always secure parts so that cannot fall or overturn.
- Dismantle parts properly and in a professional way with consideration of local labour and environmental protection regulations.
- In cases of doubt, contact the manufacturer.



DANGER!

Danger to life from electric current!

Touching live parts leads to death.

Damaged insulation or individual parts can be life-threatening.

- Before dismantling operations, switch off power supply and secure the machine against being restarted.

Personnel

- Instructed specialist personnel authorised by the operator

11.2 Dismantling

1. Switch off the machine and secure it against being restarted.
2. Physically disconnect the power supply from the unit and discharge stored energy. Check that no voltage and pressure are present.
3. Remove operating and auxiliary materials, and remaining processing materials and dispose of them in accordance with the environmental regulations
4. Clean properly assemblies and parts and disassemble them with consideration of the applicable local labour and environmental protection regulations.

11.3 Disposal

If no return or disposal agreement was made, send the dismantled components for recycling:

- scrap metal parts.
- hand over plastic parts for recycling.

- ▶ dispose of other components assorted according to material characteristics.

EU countries only

Electric waste is recyclable and must not be disposed of in the household waste!!

According to the European directive 2012/19/EU on electrical and electronic waste and version transposed into national law, used power tools must be collected separately and sent for recycling in an environmental-friendly manner.



ATTENTION!

Environmental damage resulting from improper disposal!

Wrong or negligent disposal may result in significant environmental pollution.

- Electrical scrap, electronic components, lubricants, operating and other auxiliary materials must be disposed of by specialised companies.
- In case of hazardous substances, treatment and disposal provisions of the material safety data sheets must be taken into consideration.
- In case of doubts, consult the manufacturer or local municipal authorities or specialised disposal companies on the environmentally safe ways of disposal.

12 Spare parts list

12.1 Using the spare parts list

The spare parts list is not a mounting or dismounting instruction. The only purpose of the spare parts list is to easily and quickly find spare parts which can be ordered with distribution agencies.



DANGER!

Risk of injury when mounting or dismantling assemblies!

Use of the spare part lists for mounting or dismantling may result in grave personal damage or death!

- During mounting or dismantling operations, relevant descriptions of the operating manual must exclusively be followed.

12.2 Distribution agencies

Deutschland - Germany - Allemagne - Duitsland

GÖLZ® GmbH
Dommersbach 51
DE-53940 Hellenthal
Tel: +49 (0)2482-12 200
Fax: +49 (0)2482-12 222
E-Mail: info@goelz.de / Internet: www.goelz.de

Österreich - Austria - Autriche - Oostenrijk

GÖLZ® Ges.m.b.H
Samstraße 52
A-5020 Salzburg
Tel: +43 (0) 662 - 43 81 75
Fax: +43 (0) 662 - 43 07 34
E-Mail: info@goelz.at / Internet: www.goelz.at

Frankreich - France - France - Frankrijk

GÖLZ® S.A.S.
1, rue de la Mairie
F-67370 Berstett
Tel: +33 (0)3.88.59.43.00
Fax: +33 (0)3.88.59.47.77
E-Mail: info@golz.fr / Internet: www.golz.fr

Großbritannien - Great Britain - Grande-Bretagne - Groot-Brittannië

GÖLZ® (UK) Ltd.
Unit A5, Springhead, Enterprise Park
Northfleet
Kent DA11 8HB
Tel: +44 1 474321679
Fax: +44 1 474321477
E-Mail: info@goelz.co.uk / Internet: www.goelz.co.uk

Benelux

GÖLZ® Benelux
Eupener Straße 61
BE-4731 Raeren-Eynatten
Tel: +49 (0)2482-12 200
Fax: +49 (0)2482-12 222
E-Mail: benelux@goelz.de / Internet: www.goelz-online.com

Australien - Australia - Australie - Australië

GOLZ® Pty Ltd.
44 Stanley Street
Peakhurst, NSW 2210
Tel: +61 (0) 2 9534 5599
Fax: +61 (0) 2 9534 5588
E-mail: info@golz.com.au / Internet: www.golz.com.au

USA

GOLZ® L.L.C.
5860 East Osage Ridge Lane
Columbia MO 65203-6018
Tel: +1 573 474 4961
E-Mail: info@golzusa.com / Internet: www.goelz-online.com



Note!

In order to avoid wrong deliveries the information the ordering information should be checked for accuracy and completeness before sending it! Completely indicate the delivery address!

		
So bekommen Sie schnell und richtig Ihr Ersatzteil	Always indicate	Pour obtenir rapidement les pièces de rechange indiquer
• Maschinentyp gemäß Typenschild • Baujahr gemäß Typenschild • Artikelnummer gemäß Ersatzteilliste • Maschinennummer gemäß Typenschild	• machine type according to nameplate • year of manufacture according to nameplate • order number according to spare part list • serial number according to nameplate	• type de la machine conforme de plaque d'identification • Année de construction selon plaque d'identification • Numéro de l'article selon la liste des pièces de rechange • numéro de la machine conforme de plaque d'identification
Für Bestellungen, Fragen und Informationen wenden Sie sich bitte an die zuständigen Stellen.	For orders, questions and information, please contact the competent departments.	Pour les commandes, questions et informations, veuillez-vous adresser aux points de ventes correspondants.

EU conformity declaration**GÖLZ® GmbH**

Dommersbach 51
D-53940 Hellenthal
Deutschland

declares under sole responsibility that

Model:	Drill rig
Make:	GÖLZ
Type:	RD250 S

comply with the relevant provisions of the Directives

2006/42/EG	Machinery Directive
2011/65/EU	Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment

and has been developed and fabricated in compliance with the following standards valid as at the production date:

EN ISO 12100:2011-03	Safety of machinery - General principles for design
EN 12348:2000+A1:2009	Core drilling machines on a stand - Safety

In the system with engines:

2014/35/EU	Low Voltage
2002/44/EG	Vibration
2005/88/EG	Noise emission
2012/19/EU	Electrical and electronic waste

Storage of the technical documentation:

GÖLZ® GmbH

Entwicklung & Konstruktion

The year of manufacture and the machine number are indicated on the device.

Hellenthal, 22.11.2017
GÖLZ® GmbH

Managing Director